

BTS256-EF

<https://www.gigahertz-optik.com/en-us/product/bts256-ef/>

Product tags: VIS



Description

Traditional lux meters are increasingly being replaced by spectral light meters such as the [product_link]449[/product_link]. However, the lighting industry also needs high accuracy spectral light meters that can handle more complex measurements. These include measurement of pulse width modulated light and the ability to measure both internal and external illumination, determination of thermal transient behavior of lamps, and so on. The primary criterion that such meters must always meet is the quality of their photometric features. Additional electronic features may improve usability and display quality, but they cannot compensate for substandard measurement results.

Manufacturers of lamps and luminaires for general lighting purposes must consider light flicker when qualifying product safety in terms of EMC immunity requirements. In addition to the influence of mains voltage fluctuations, flicker effects caused by the lamp and the luminaire itself must be taken into account.

With the BTS256-EF, Gigahertz Optik GmbH, a renowned measuring device manufacturer, offers a universal measuring device for the determination of all relevant light parameters in general lighting. Combined with a programmable AC source, the BTS256-EF becomes a comprehensive flicker test system for lamps and luminaires including voltage fluctuation immunity tests IEC TR 61547-1:2017.

BTS256-EF – Highquality, spectral light and color measurement meter

The BTS256-EF is a high-quality measuring device for photometric and colorimetric measurement of general lighting products and conditions.


*One of its unique features is the from Gigahertz-Optik developed innovative **BiTec sensor** that consists of a $V(\lambda)$ filtered Si photodiode and a spectroradiometer unit. This makes it extremely linear, stable, and fast and is therefore a guarantee for higher measurement accuracy which is not accompanied by any disadvantages. Both sensors can be used independently and the mutual correction of the sensors is advantageous for accuracy, speed and versatility.

Thus, the meter supports all the requirements of a modern light meter:

- Cosine field of view illuminance measurement for accurate evaluation of extended illumination (class B DIN 5032 part 7 or AA according to JIS C 1609-1:2006)
- Flicker measurement
- Spectral measurement technology, required for LED light, color, color rendering, color effects
- Photodiode for synchronization to pulse width modulated light and flicker measurement
- alpha-opic illuminance and irradiance measurement (CIE S 026:2018)
- Compact and robust design for mobile use



BTS256-EF for complex measurements in lighting technology, including flicker measurement

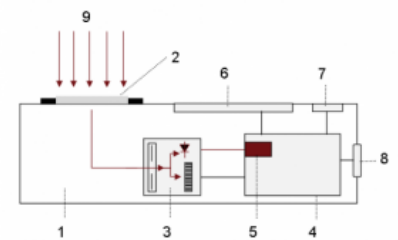

Principle illustration of the BTS256-EF

- 1) BTS256-EF
- 2) Precision cosine diffuser
- 3) BiTec sensor with Si photodiode, CMOS diode array spectrometer and shutter
- 4) Photometric Si-photodiode with fast amplifier
- 5) Microprocessor
- 6) Display
- 7) Control Buttons
- 8) USB 2.0 interface
- 9) Light incident

BTS256-EF – Flicker meter

In its function as a light-flicker meter, the BTS256-EF supports all current [flicker measurements](#):

- Percent Flicker (IEEE Std 1789-2015, IES: RP-16-10, CIE: TN-006)
- Flicker Index (IEEE Std 1789-2015, IES: RP-16-10, CIE: TN-006)
- FFT Frequency component analysis
- P_{st} Short term flicker severity (CIE: TN-006, IEC TR 61547)
- Stroboscopic Visibility Measure, SVM (CIE: TN-006, IEC TR 63158)
- M_p ASSIST Flicker perception metric
- Joint Appendix JA10

In addition, the BTS256-EF allows flicker tests according to IEC TR 61547 when operated in combination with [power supply LPS-CH-500](#). These tests aim to probe flicker stability when light sources are operated in an AC circuit under the influence of disturbance signals.

BTS256-EF – Meter for photosynthetically active radiation (PAR) in plant growth


LED grow lights need to be measured in terms of the Photosynthetically Active Radiation (PAR) they produce. This function is supported by the BTS256-EF. The Photosynthetic Photon Flux Density (PPFD) in $\mu\text{mol}/(\text{m}^2 \cdot \text{s})$ can be measured which is a measure of the total number of photons within the PAR wavelength range that reach a surface each second per square meter area. Furthermore, the daylight integral (DLI) can be displayed which represents the total amount of photosynthetically active radiation received by a plant in the course of a day.

Calibration of the BTS256-EF


One essential quality feature of photometric devices is their precise and traceable calibration. The BTS256-EF is calibrated by Gigahertz-Optik's calibration laboratory that was accredited by DAkkS (D-K-15047-01-00) for the *spectral responsivity* and *spectral irradiance* according to ISO/IEC 17025. The calibration also included the corresponding accessory components. Every device is delivered with its respective calibration certificate.

Options for the BTS256-EF light meter


- Software development kit for integration of the device in the user's own software
- In combination with [software tool S-T-Flicker and the programmable AC Source LPS-CH-500](#) Gigahertz-Optik GmbH offers a functional extension of the BTS256-EF for an test system according to the IEC TR 61547-1:2017 Equipment for general lighting purposes - EMC immunity requirements - Part 1: An objective light flicker and fluctuation immunity test method.

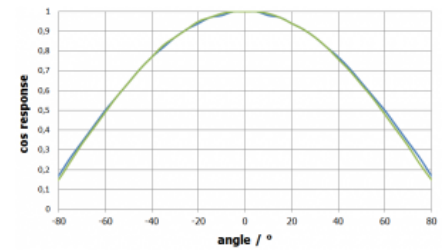


BTS256-EF light meter with precise cosine field of view function

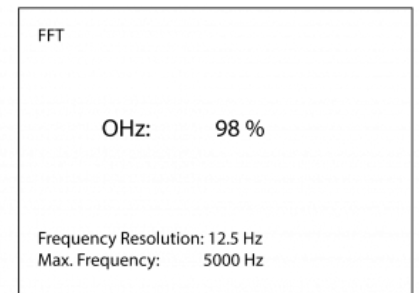

BTS256-EF Flicker Measurement

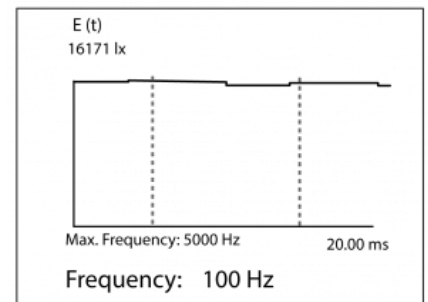

BTS256-EF Flicker Measurement

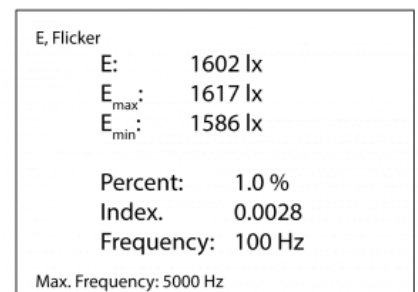

BTS256-EF Flicker Measurement

Specifications

General

Short description	Spectroradiometer for the illuminance (photopic, scotopic, melanopic), PAR, spectrum, light color, color rendering index, and flicker
Main features	Mobile measurement device, BiTec sensor with a V-lambda photodiode and low stray light CMOS spectroradiometer with a 10 nm optical bandwidth and additional optical bandwidth correction (CIE214), remote-controlled offset shutter, precise cosine-corrected field of view, data logger, automatic PWM synchronization, flicker measurement of Pst, SVM, Flicker Index, etc.
Measurement range	1 lx to 199,000 lx, 360 nm to 830 nm, flicker frequency between 0.25 Hz and 200 kHz
typical applications	Precise spectral light meter for the lighting industry
Calibration	Factory calibration, traceable to international standards

Product

Sensor	class B DIN 5032 part 7 or AA according to JIS C 1609-1:2006 class A DIN 5032 part 7 for f1' and f4, or general precision class according to JIS C 1609-1:2006 class L DIN 5032 part 7 for U response, IR response, f3, f6 and f7
Sensor	Bi-Technology sensor with a photometric broadband detector and a array spectrometer. Integrated aperture for automatic dark signal adjustment.
Input optics	Diffuser window with 20mm diameter, cosine corrected field of view, f2 Error \leq 3%
Filter	Spectral responsivity with fine CIE photometric matching. Online correction of the photometric matching through spectral measurement data (spectral mismatch factor correction)

Flicker

Measurands: Percent flicker (IES:RP-16-10, CIE TN 006:2016, CIE TN 012:2021), flicker index (IES:RP-16-10, CIE TN 006:2016, CIE TN 012:2021), flicker frequency, fast fourier transformation (FFT), P_{st} short-term flicker severity Pst (CIE TN 006:2016, CIE TN 012:2021, IEC TR 61547:2020), stroboscopic effect visibility measure SVM (CIE TN 006:2016, CIE TN 012:2021, IEC TR 63158), Mp ASSIST, joint appendix JA10.

The BTS256-EF has a limited internal memory and can thus only access the following frequency range when used as a handheld meter (without a PC):

Measurement Time (Sensor)	Measurement Time (Flicker)	Sampling Rate	Upper Cut-Off Frequency	Lower Cut-Off Frequency
50 ms	41.0 ms	20 µs	5 kHz	60 Hz
100 ms	81.9 ms	40 µs	5 kHz	30 Hz
200 ms	163.8 ms	80 µs	2.5 kHz	15 Hz
500 ms	327.7 ms	160 µs	1.2 kHz	8 Hz
1000 ms	655.4 ms	320 µs	0.6 kHz	4 Hz
3000 ms	2620 ms	1280 µs	150 Hz	1 Hz
6000 ms	5240 ms	2560 µs	75 Hz	0.5 Hz
12000 ms	10486 ms	5120 µs	33 Hz	0.25 Hz

The measurement range extends to the following range when the BTS256-EF is used in combination with a PC and the S-BTS256 or S-SDK-BTS256 software:

Measurement time (Flicker)	Sampling Rate	Upper Cut-Off Frequency	Lower Cut-Off Frequency	uncertainty at acceptable S/N ratio	FFT frequency resolution
min.	1 ms (1kHz)	200 Hz	2.5 kHz	1% ± 0.5 Hz	1 kHz
1 ms	-	-	-	-	-
	5 µs (200kHz)	10 kHz	-	-	-
max.	1 ms (1kHz)	200 Hz	0.014 Hz	1% ± 0.5 Hz	0.005 Hz
180 s (3 min)	-	-	-	-	-
	10 µs (100kHz)	10 kHz	-	-	-

Spectral Detector

Chip	CMOS diode-array
spectral range	(360 - 830) nm
Optical Bandwidth	10 nm, mathematical optical bandwidth correction according to CIE 214 can be automatically applied
Data Resolution	1 nm
Integration Time	(5.2 - 30000) ms
Shutter	Automatic aperture for dark signal measurements with the same integration time as that of light measurements. Aperture delay = 100ms.
typical measurement time	199,999 lx ≤ 5ms (white light) 100 lx ≤ 1s (white light)
Color measurement range spectral	(1 - 199,999) lx
Scotopic	Scotopic measurement range spectral (1 - 199,999) lx Calibration uncertainty of scotopic illuminance +/-2.2%
Peak wavelength	+/- 1nm



Dominant wavelength	+/- 1 nm								
Repeatability Δx and Δy	+/- 0.0001 (Standard illuminant type A) +/- 0.0002 (LED)								
Δy Δx uncertainty	+/- 0.002 (Standard illuminant type A) +/- 0.005 (typ. LED)								
CCT Measurement range	(1700 - 17000) K								
ΔCCT	+/- 50K (standard illuminant type A) +/- 4% (depending on the LED spectrum)								
CRI (color rendering index)	Ra and R1 to R15								
Stray Light	6E-4 (Blue LED) 6E-4 (Green LED) 6E-4 (Red LED) 1E-3 (White LED) (typical value, measured 100 nm to the left of the peak of the LEDs)								
Calibration uncertainty	Spectral irradiance <table border="0"> <tr> <td>(360 - 399) nm</td> <td>± 5,5 %</td> </tr> <tr> <td>(400 - 479) nm</td> <td>± 4 %</td> </tr> <tr> <td>(480 - 779) nm</td> <td>± 3,8%</td> </tr> <tr> <td>(780 - 830) nm</td> <td>± 4,3 %</td> </tr> </table> Spectral irradiance responsivity (360 - 830) nm	(360 - 399) nm	± 5,5 %	(400 - 479) nm	± 4 %	(480 - 779) nm	± 3,8%	(780 - 830) nm	± 4,3 %
(360 - 399) nm	± 5,5 %								
(400 - 479) nm	± 4 %								
(480 - 779) nm	± 3,8%								
(780 - 830) nm	± 4,3 %								
Integral Detector									
Calibration uncertainty	Illuminance ± 2.2%								
f1' (spectral mismatch)	≤6% (uncorrected) ≤3% (f1' $a^*(s_2(\lambda))$) respectively $F^*(s_2(\lambda))$ corrected by spectral data, done automatically by BTS technology)								
max. illuminance	≥199,999 lx								
Noise equivalent illuminance	≤ 0.01lx								
ADC	12Bit								
Measurement time	(0.1 - 6000) ms								
temperature range	The measured values of the diode are corrected by means of an internal temperature sensor.								
Graphs									
f2 (directional response/cosine error)	[image src="/var/www/html/web/assets/ba8abce7bf/f2-BTS256-E.png" id="6337" width="600" height="408" class="leftAlone ss-htmleditorfield-file image" title="f2 BTS256 E"]								
spectral responsivity	[image src="/var/www/html/web/assets/eaae3c1542/BTS256-EF-Responsivity2.png" id="6340" width="600" height="332" class="leftAlone ss-htmleditorfield-file image" title="BTS256 EF Responsivity2"]								
Miscellaneous									
Microprocessor	16Bit, 25ns instruction cycle time								
Power Supply	5VDC, 450mA per USB								
Interface	USB 2.0 (Type B USB) Option WiFi: WiFi 2,4 GHz (external antenna, range > 100m)								

temperature range	Operation: +10°C bis +30°C Storage: -10°C bis +50°C
Housing	Splashproof IP54
Transport case	333mm x 280mm x 70mm, 650g
Dimensions	159mm x 85mm x 45mm (Length x Width x Height)
Weight	500 g

Downloads

Type	Description	File-Type	Download
Brochure	Light measurement solutions for general and specialized lighting	pdf	https://www.gigahertz-optik.com/assets/Uploads/generalighting-broschuere-DINA4-hoch-v2.pdf

Configurable with

Product Name	Product Image	Description	Go to product
S-SDK-BTS256		Software Development Kit for BTS256 variants.	https://www.gigahertz-optik.com/en-us/product/s-sdk-bts256/
S-BTS256		Application software for BTS256 variants.	https://www.gigahertz-optik.com/en-us/product/s-bts256/

Purchasing information

Article-Nr	Modell	Description
Product		
15312815	BTS256-EF	BTS256-EF meter, user manual (D or E), S-BTS256 user software as a download, USB cable for PC operation and battery charging, USB power adapter (EU, USA or GB), BHO-17 hard-top case
15312983	BTS256-EF WiFi	BTS256-EF WiFi meter, user manual (D or E), WiFi antenna, S-BTS256 user software as a download, USB cable for PC operation and battery charging, USB power adapter (EU, USA or GB), BHO-17 hard-top case
Calibration		
15311565	KP-BTS256EF-E-S	Option: DIN EN ISO/IEC 17025:2018 Test Certificate (DAkKS). Spectral irradiance measurement and illuminance measurement in wavelength range 360nm to 830nm.

Article-Nr	Modell	Description
Re-calibration		
15300751	K-BTS256-E-I	Recalibration of the BTS256-EF. Including calibration certificate.
15311564	KKP-BTS256EF-E-S	Factory Calibration Certificate with DIN EN ISO/IEC 17025:2018 Test Certificate.
Options		
15308526	LPS-CH-500	Programmable power supply with reference source impedance Commissioning and training on request
Software		
15298218	S-SDK-BTS256	Software Development Kit; Software and users guide on CD
15308525	S-T-Flicker	Flicker software tool, only usable in combination with LPS-CH-500